 


Quick-start Guidance

1. Check if the product is connected to power.
2. Check if the Bluetooth on your cellphone and the product is on.

How to turn on the Bluetooth on the product:

Press the power button “⏻” for five seconds until the Bluetooth symbol “📶” on the display starts flickering.

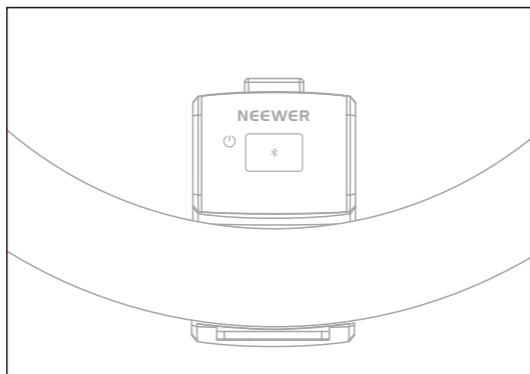

3. Please keep the product within 5 miles of your cellphone when in use.
4. Enter the NEEWER APP to register/log in, then click the “+” on the homepage to connect the device.


SRP16 Smart Ring Light Instruction Manual

NEEWER[®]

Table of Contents

1.Package Contents	1
2.Applications	2
3.Compatible Photography Equipment	2
4.Functions	3
5.Power Supply	5
6.The Functions of Modes	6
7.Ring light multi-funtion control	9
8.To install the ring light	10
9.To install the converter base	11
10.To install the phone holder	12
11.To connect with the bluetooth remote control	13
12.Safety Notes	14
13.Caution	15
14.Product Parameters	15
15.Warranty Policy	16
16.Trademark and Statement	17
17.Contact Us	17

 1.Package Contents

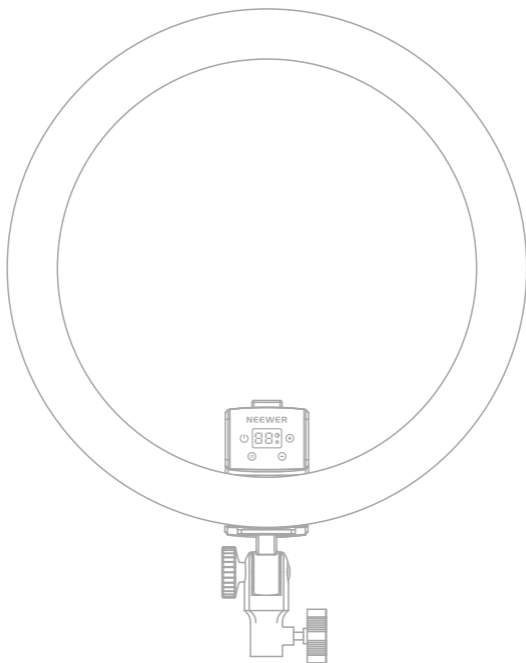

Upon receiving the package, please check whether all the items are included. If there is any missing or broken items, please contact Neewer Customer Service (support@neewer.com).

2.Applications



 
Broadcast Lighting



Wedding Photography



Portrait Photography

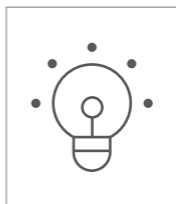

More creative applications
for video shooting

3.Compatible Photography Equipment



相机



 
 
摄像机





支架

4.Functions

Ring Light

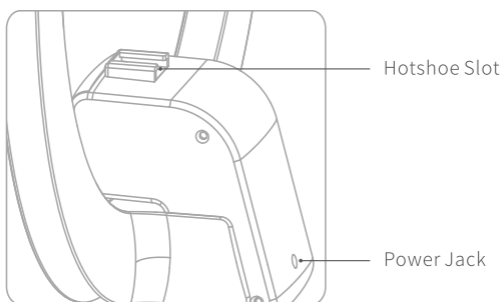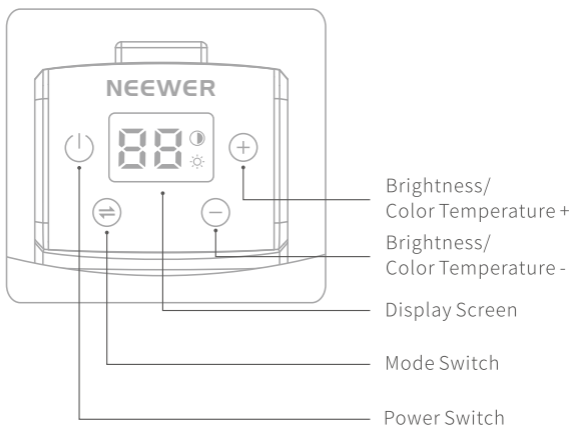


Remote Control

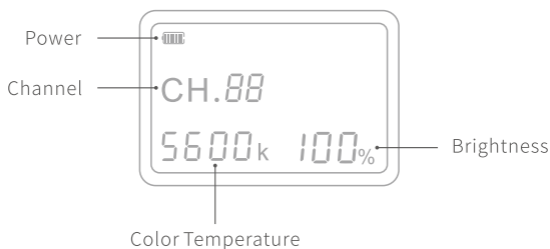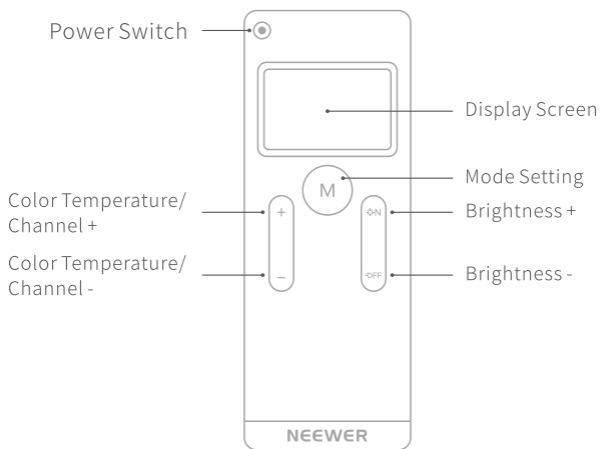  


5. Power Supply

 by DC adapter

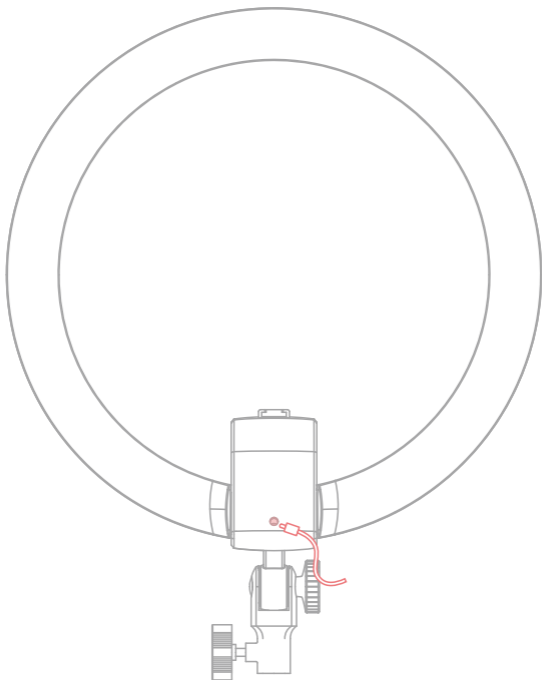


6.The Functions of Modes

 Color Temperature

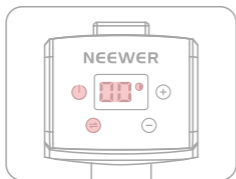


 After plugging in the power cord, press the Power Switch button “ ⏻ ” for one second to turn on the light. Press the Mode Switch button “ \ominus ” until the color temperature Icon “ ☉ ” is displayed on the screen.

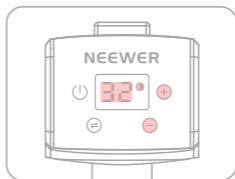


The color temperature can be adjusted by pressing the “ \oplus ” and “ \ominus ” button. The color temperature ranges from 32 to 56. (32 refers to 3200K of color temperature while 56 refers to 5600K.)

 Brightness

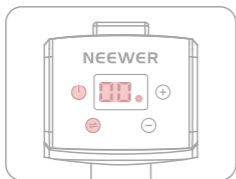

 
After plugging in the power cord, press the Power Switch button “ ⏻ ” for one second to turn on the light. Press the Mode Switch button “ \ominus ” until the brightness icon “ ☼ ” is displayed on the screen.

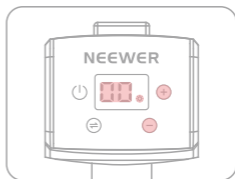


The brightness of the light can be adjusted by pressing the “ \oplus ” and “ \ominus ” button. The brightness ranges from 1 to 10. (1 refers to 1% of brightness while 10 refers to 100%.)

To remotely control the ring light

 Demo: controlling a single ring light

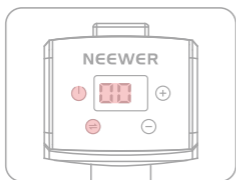

 After plugging in the power cord, press the Power Switch button “**⏻**” for one second to turn on the light. Press the Mode Switch button “**⊖**” for one second until the channel code is displayed on the screen.

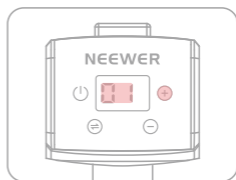

The channel of the light can be adjusted by pressing the “**+**” button. There are ten channels available ranging from 1 to 10. (For example, if the channel of the light is set as “**01**”, then the remote control needs to switch to channel “**1**”.)

 




Firstly, press the Power Switch “**⏻**” on the remote control, and press the “**M**” button until the “CH. (number)” symbol starts flickering. Then press the “**+**” or “**-**” button until the number “**1**” is displayed on the screen. Finally, press the “**M**” button to confirm the setting, then the single SRP16 Ring Light can be controlled remotely.




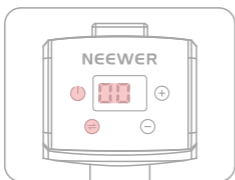


⚠ There are 11 channels available on the ring light. Channel 1 to Channel 10 can match their corresponding channels on the remote control so as to control one light separately. (When controlling multiple ring lights, the channel on different lights can be set as any number from “0” to “10”, then switch the remote control to Channel “88” to control all lights at the same time.)

 Demo: controlling all ring lights



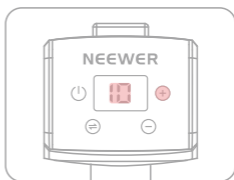


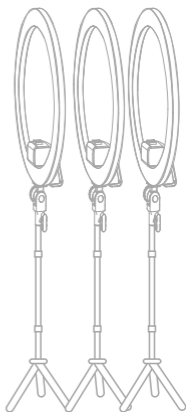 
After plugging in the power cord, press the Power Switch button “” for one second to turn on the light. Press the Mode Switch button “” for one second until the channel code is displayed on the screen.



The channel of the light can be adjusted by pressing the “” button, ranging from 1 to 10. (For example, if the channel of the light is set as any number between “” and “”, then the remote control needs to switch to channel “**88**”.)

 


Firstly, press the Power Switch “” on the remote control, and press the “” button until the “CH. (number)” symbol starts flickering. Then press the “+” or “-” button until the number “**88**” is displayed on the screen. Finally, press the “” button to confirm the setting, then all SRP16 Ring Light can be controlled remotely.




7. Ring light multi-function control

Controlling all SRP16 ring lights

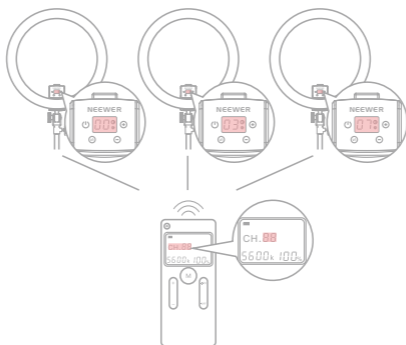


If the channel on different lights is set as any number from “00” to “10”, then the remote control need to switch to Channel “88”.

 Controlling multiple SRP16 ring lights

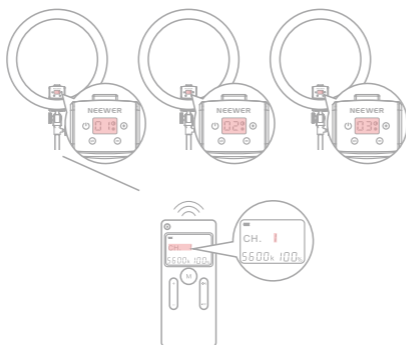


If the channel on a light is set as “01”, then the remote control needs to be switched to Channel “1”. Accordingly, the 10 ring lights can be controlled separately in the same way.

 
8.To install the ring light

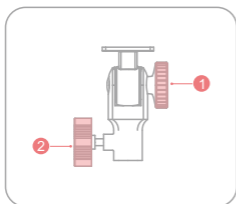

 
- 1 Light Fixing Knob
- 2 Stand Fixing Knob

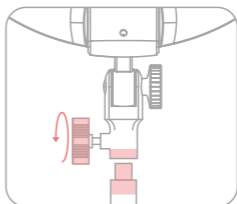

 Mount the converter base onto the stand, then rotate the 2 Stand Fixing Knob clockwise until it's locked.

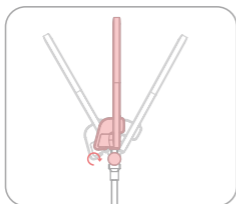


 Rotate 1 Light Fixing Knob until the light body is loosened, then the light can be adjusted to fit different angles.

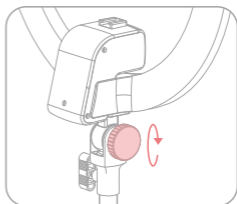


Finally, rotate the 1 Light Fixing Knob clockwise until the light is fixed.

 
9.To install the converter base

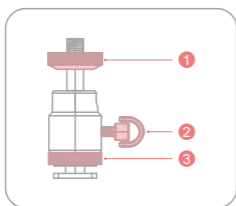

 
- ① Fixing Knob
- ② Angle Adjustment Knob
- ③ Base Fixing Knob

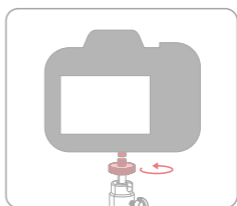

 Insert the ① Fixing Knob into the socket on your camera, then rotate it clockwise until your camera is secured on the base.

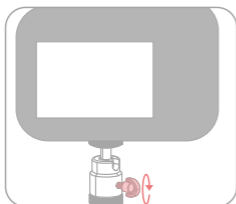


 Rotate the ② Angle Adjustment Knob clockwise until the camera is completely locked in.

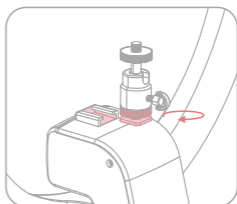


Mount the converter base onto the hot shoe on the light, and rotate the ③ Base Fixing Knob clockwise until it's locked.

 
10.To install the phone holder

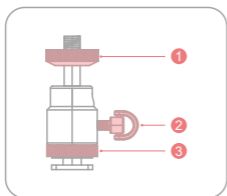

 
- 1 Fixing Knob
- 2 Angle Adjustment Knob
- 3 Base Fixing Knob

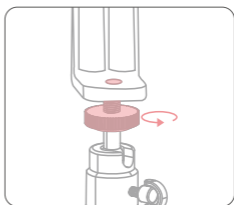

 Insert the 1 Fixing Knob into the socket on phone holder, then rotate it clockwise until the phone holder is secured on the base.

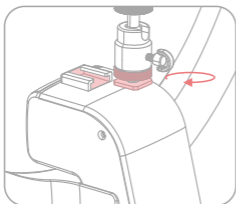

 Mount the converter base onto the hot shoe on the light, and rotate the 3 Base Fixing Knob clockwise until it's locked.

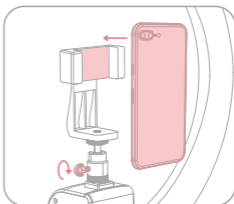

Finally, rotate the 3 Base Fixing Knob clockwise until it's locked and put your cell phone onto the holder.

 
11.To connect with the bluetooth remote control



Turn on the bluetooth remote control.



Turn on the bluetooth on your phone.

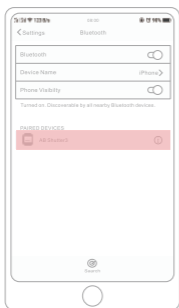

Then find a bluetooth device called "AB SuttR3" and connect it to your cell phone.



Finally, enter the camera app on your phone to take pictures.

⚠ If the indicator on the remote doesn't light up, please check if the battery cover is loose or batteries need to be replaced.

 
12.Safety Notes




⚠ Please do not use the light in the rain or in a humid environment.



⚠ Please do not use the light in a flammable or explosive environment in case of safety hazard.

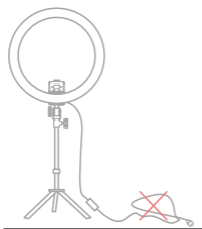

 ⚠ Please put the cables away in case of tripping hazard.

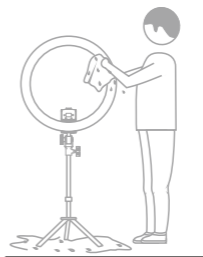

⚠ Please do not use chemicals or liquids to clean the LED light.

13.Caution

- Please do not look the light in the eye to in case of visual impairment.
- Please do not reconnect the power cable in case of safety hazard.
- Please do not dismantle or modify the circuit of the item (unless professionally certified).
- Please use the power adapter included in the package or other certified power adapters.
- Please do not use alcohol or liquids to clean the light in case of product damage.
- Please do not hit or crash the light.
- Please do not expose the item to the sun for a long time.
- Please unplug the power cable when the product is not in use.
- Please use soft cloth to clean the light.
- Failure to comply with the items listed above will void the warranty.

14.Product Parameters

Model	SSRP16
LED quantity	240
Lumen	0.5M 2100Lux 1M 850Lux
Color Temperature	3200-5600K(± 100)
Input Voltage	DC IN 12-15V
Power	38W
Size	410*415*96mm

15.Warranty Policy

Warranty Period

You can register your NEEWER® product for its free 1-year warranty at www.neewer.com.Thanks!

Your questions or suggestion are highly valued and appreciated. Please feel free to contact us, and we will do our best to fully satisfy you.E-MAIL:support@neewer.com

Reminder: Please keep the package box for at least 15 days because it is necessary to use the package box to protect the product during transportation.

Warranty Restrictions

The following conditions are NOT covered by the NEEWER® Warranty:

- (1)The product has expired the one-year warranty period;
- (2)The product is malfunctioned or damaged because the user did not follow the ring light to use, adjust, or operate the product;
- (3)The product is malfunctioned or damaged due to rain, hailstorm, fumigation, medicine, chemicals or natural wastage; and due to force majeure (include but not limited to earthquake, Typhoon, fire, flood, violent crime);
- (4)The user modify, dismantle, repair the product and its parts without permission;
- (5)The user damaged the parts of ring light by using non-original accessories, or changed the circuit, line configuration without permission;
- (6)The product is malfunctioned or damaged by collision or fall-off due to the user;
- (7)Warranty Card, After-sale Service Card, invoice or item No does not conform to the product.
- (8)An user changes the warranty service date of the product and its parts without permission;
- (9)The panel and main parts are beyond maintenance range; The security label on the product is missing or damaged.
- (10)The is used as a commercial product.

16.Trademark and Statement

NEEWER[®] is a registered trademark of **NEEWER**[®] Technology Company, Ltd, which is protected by law. **NEEWER**[®] company reserves all rights for this trademark. **NEEWER**[®] has continuously devoted itself to develop new products, upgrade existing products and decrease defect product rate. If you meet any questions or problems about our product, please refer to our after-sale service team or authorized service provider for help. The actual product may differ from the picture in this manual in color and appearance.

17.Contact Us

Your questions or suggestion are highly valued and appreciated. Please feel free to contact us, and we will do our best to offer satisfying services for you. E-MAIL: support@neewer.com
WEB: www.neewer.com